


## GET STARTED WITH COLORGATE

1. Review ColorGATE license information video <https://www.youtube.com/watch?v=5hoIKuPBt6A>
2. Register as a user and on the ColorGATE Service & Support website (<https://support.colorgate.com/colorgate.rip/en/support/registration/>)

<https://support.colorgate.com/colorgate.rip/en/support/registration/>

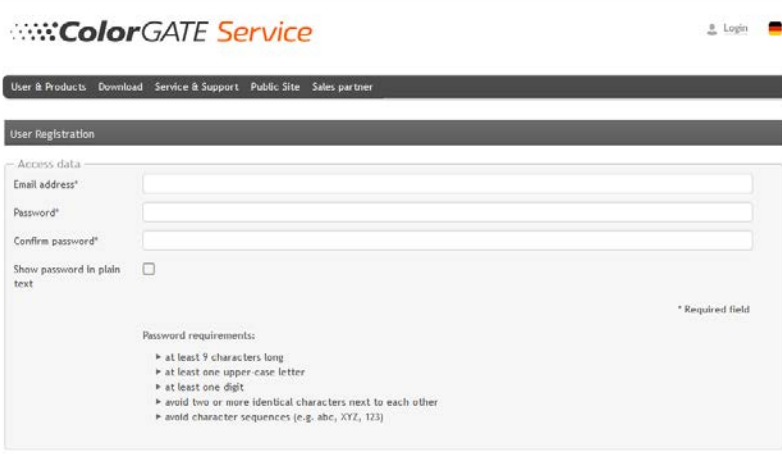

The screenshot shows the user registration page on the ColorGATE website. At the top, there is a navigation bar with links for 'User & Products', 'Download', 'Service & Support', 'Public Site', and 'Sales partner'. Below this is a 'User Registration' section with a form titled 'Access data'. The form contains three input fields: 'Email address\*', 'Password\*', and 'Confirm password\*'. There is a checkbox for 'Show password in plain text' and a note '\* Required field'. Below the form, there are 'Password requirements' listed: at least 9 characters long, at least one upper-case letter, at least one digit, avoid two or more identical characters next to each other, and avoid character sequences (e.g. abc, XYZ, 123). A 'Next' button is located at the bottom of the form.

3. Check your registered email address for your email address confirmation link and finish activating your account
4. Register Your License Number received with your printer located in the Printing Software envelope (<https://support.colorgate.com/colorgate.rip/en/products/registration/>)



Product registration

To be able to operate your ColorGATE product beyond the test period, please perform a product registration. Enter the following data:

License number\*  ⓘ

Primary email address engineering@RicohDTG.com

Additional email addresses  ⓘ

\* Required field

I. Choose between online mode (Recommended) and offline mode

**ColorGATE Service** User profile Logout

User & Products Download Service & Support Public Site Sales partner


Product registration – License usage mode License number:

Please choose how you want to use your license:

- Online mode - You can transfer your license to another computer by yourself at any time. However, the RIP computer must be connected to the internet. This applies both during license activation and later while working with the ColorGATE software.
- Offline mode - You can only activate your license once. If you want to transfer your license to another computer later, you must contact our Customer Service team. The RIP computer only needs to be connected to the internet during license activation.

- 5. Check your registered email address for your license number activation code
- 6. Install the Production Server ColorGATE RIP software on your PC. See link to latest version (<https://support.colorgate.com/colorgate.rip/en/download/updatecenter/updates/?langid=en&action=chdr&file=%2FVersion%2020%2FProductionserver%2020#ovtop>)

I. During Installation process select “Single Host License/Software (SHL-SW)”

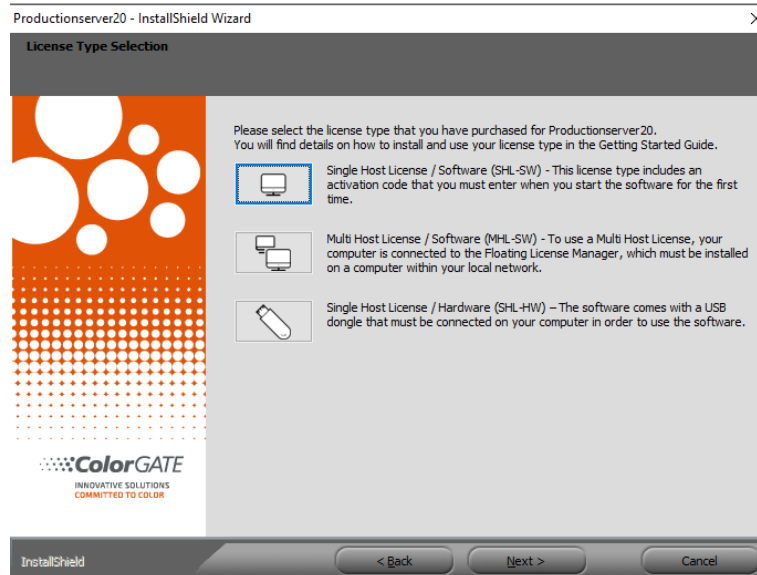

## II. Enter the activation code received in your email to finish Installation

ColorGATE Digital Output Solutions GmbH

— □ ×



### Enter activation code

Please make sure that you have an active internet connection. Then enter your activation code and click on "Activate". The license server will be connected and an unlock code will be requested. If you want to cancel the process, click on "Exit".

Activation code:

Exit

Activate

7. Once the software is installed, you also will need add your printer and to install the MIM package so that you have the right color profiles to use with your machine.
  - I. Ri 1000 MIM download link  
[https://support.colorgate.com/tools/dlm.php3/9572/PS\\_Ricoh\\_Ri\\_1000\\_Combi-MIM.cmp](https://support.colorgate.com/tools/dlm.php3/9572/PS_Ricoh_Ri_1000_Combi-MIM.cmp)
  - II. Ri 2000 MIM download link  
[https://support.colorgate.com/tools/dlm.php3/9655/PS\\_Ricoh\\_Ri2000\\_Combi-MIM\\_ver1.0.cmp](https://support.colorgate.com/tools/dlm.php3/9655/PS_Ricoh_Ri2000_Combi-MIM_ver1.0.cmp)
  - III. **Note: Ri 2000 MIM files are not compatible for the Ri 1000 and Ri 1000 MIM files are not compatible with the Ri 2000**
8. Once ColorGATE Production Server is installed, the PC will need to be online to receive software updates.
9. Check RICOH DTG Support page for our latest ColorGATE Tutorials
  - I. <https://ricohdtg.com/colorgate/>